



Technical Documentation

ZRF-P 3000 TIMING BELT CONVEYOR

Each serial number is unique to that specific conveyor and provides mk North America with complete order details.

The conveyor serial number is located on the frame at the drive end of the conveyor. See section 2 for more details.

Your serial number is also recorded above.

Ensure the serial number tag above matches the serial number on your conveyor.

Technical Documentation

ZRF-P 3000

| | | |
|------|---|----|
| 1 | General Information | 3 |
| 2 | Decoding Your Serial Number | 4 |
| 3 | Conveyor Description | 5 |
| 4 | Warranty Information | 7 |
| 5 | Safety Requirements | 8 |
| 6 | Wear Items & Maintenance for Specific Drive Options | 10 |
| 7 | Conveyor Maintenance - Belt Tensioning | 16 |
| 8 | Conveyor Maintenance - Timing Belt Replacement | 18 |
| 9 | Conveyor Maintenance - Slider Bed Replacement | 20 |
| 10 | Notes & Contact Information | 20 |
| 10.2 | Contacting mk North America, Inc. | 21 |

1 GENERAL INFORMATION

1.1 Foreword

Congratulations on purchasing a conveyor from mk North America, Inc., a leading manufacturer of quality low profile conveyors. Our more than 30 years experience in material handling allows us to offer robust solutions with long life and reliable operation. We strive to make the best products in the industry even better and we are committed to making sure our customers get top notch support before, during, and after each and every sale.

1.2 The importance of reading your manual

Inside this manual you will find the instructions on how to set up and maintain your mk conveyor properly, as well as maximize its performance. Please take the time to read this manual and familiarize yourself with these set up and maintenance instructions. These instructions will help assure a long product life that requires a minimum amount of service and keeps your conveyor working at its maximum capacity.

1.3 If you need assistance

If you need assistance there are a variety of ways to get it. You can contact our customer service team Monday through Friday, 8am-5pm (Eastern Time) at (860) 769-5500. You can also visit our website for additional information and technical documentation at www.mknorthamerica.com. In addition, your local representative can provide support in many instances.

1.4 When your shipment arrives

- 1) Check your shipment
 - a) If you have not already done so, visually inspect the shipping crate/container for any damage caused during shipment.
 - b) Carefully unpack the crate/container making sure to inspect the components for damage that may have occurred inside the packaging materials.
 - c) If you find any damage, please contact the carrier and mk North America, Inc.
 - d) Lastly, check the contents against the packing slip provided by mk for any discrepancies. If you should find any, please contact mk North America, Inc.

- 2) Locate your ordered items
 - a) Each mk conveyor will ship in its own custom built container, carefully packaged in the most economical way.
 - b) Review the packing slip against your Purchase Order.

Technical Documentation

ZRF-P 3000

2 DECODING YOUR SERIAL NUMBER

- The conveyor's serial number is located on the frame at the drive end of the conveyor.
- See image below for label example.
- **YOUR SERIAL NUMBER IS ON THE FRONT COVER OF THIS MANUAL.**
- We have provided an area in the back of this manual for you to add any notes about this unit.



Serial #: This number is unique to this item. With this number we can access all of the original order details.

Date: This is the date that the unit was scheduled to ship.

Type: This description refers to the type of unit that is associated with the particular serial number. The type should NOT be substituted for the serial number when inquiring.


DWG#: This number, if applicable, refers to the specific drawing that was created for this unit. Not all orders require a drawing and therefore in some cases no DWG# is assigned. If your DWG# field is blank it is not a cause for concern.

SO#: This is the shop order number in which this unit was built. This is an mk North America, Inc. internal number. This number is also referenced on any related invoices, etc.

3 CONVEYOR DESCRIPTION

3.1 Conveyor Description

Designations:

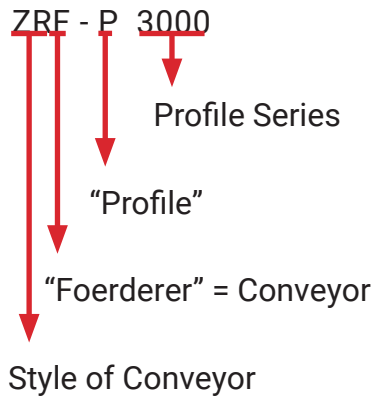

GUF (Gurt Foerderer) Belt Conveyor

KTF (Kettengurt Foerderer) Chain Conveyor

KFG (Knickfoerderer Gurt) Bent Belt Conveyor

KGF (Kurvengurt Foerderer) Curve Belt Conveyor

MBF (Modulband Foerderer) Modular Belt Conveyor

SBF (Scharnierband Foerderer) Hinged Belt Conveyor

SRF (Staurollen Foerderer) Accumulating Roller Conveyor

Technical Documentation


ZRF-P 3000

3 CONVEYOR DESCRIPTION

(CONT.)

3.2 Conveyor Components

The ZRF-P 3000 has many typical conveyor components. Below is a description of the basic parts and options for the ZRF-P 3000 conveyor. The items you receive will vary based on your actual purchase order. Items may appear different on your model based on your particular order requirements. Consult your approval drawing for specific items included in your order.

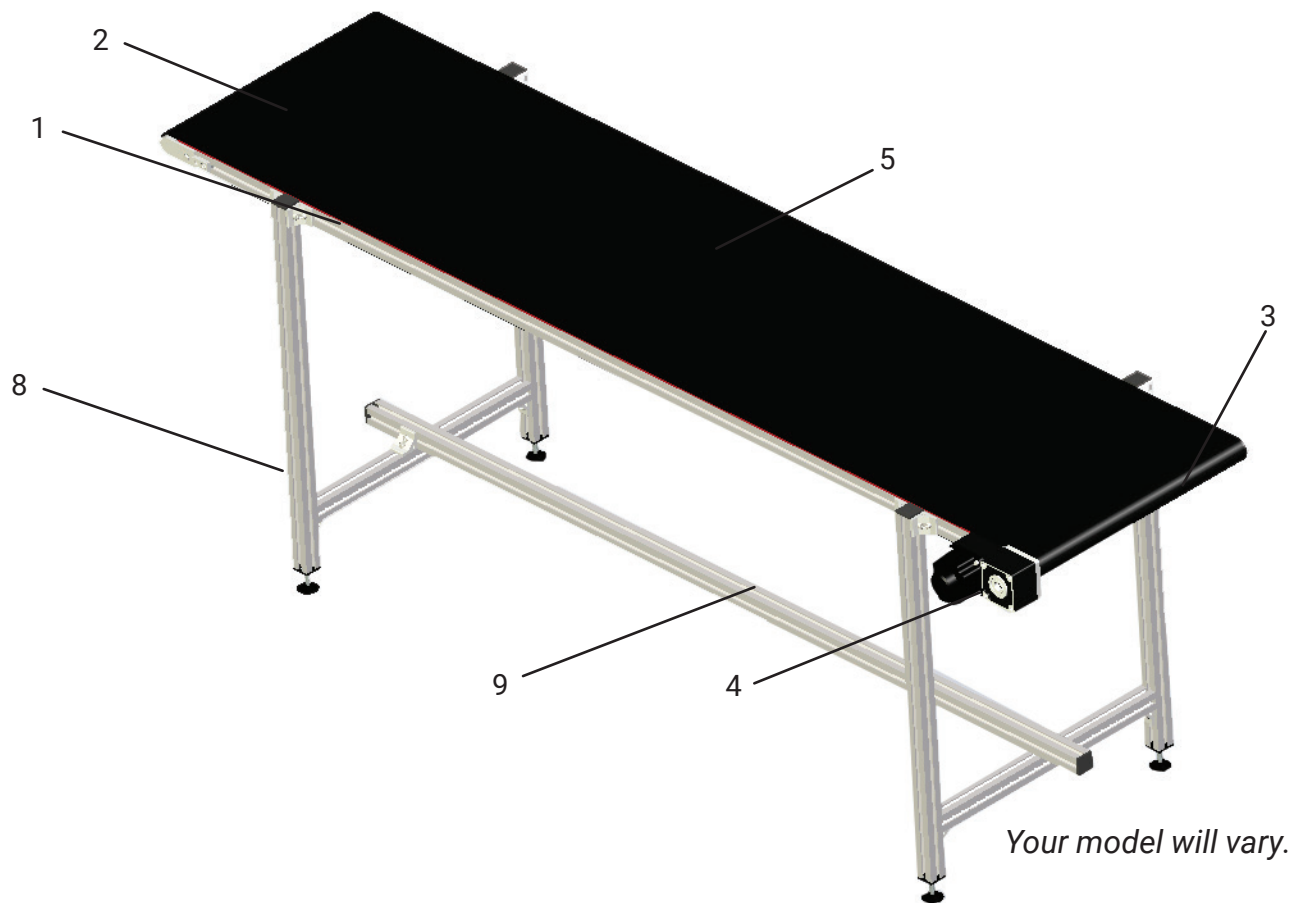

Typical Components

- 1) Conveyor Frame
- 2) Idler End
- 3) Gearmotor Mount/Drive Assembly - [serial number plate mounted here](#)
- 4) Gearmotor
- 5) Timing Belt
- 6) Controller (Not shown)
- 7) Side Rails (Not shown)
- 8) Support Stand
- 9) Stand Stringer

4 WARRANTY INFORMATION

Warranty

mk North America, Inc. (MKNA) offers a COMPLETE ONE YEAR WARRANTY from the date of delivery, to the original purchaser of the MKNA equipment (CUSTOMER), to be free from defects in material and workmanship; under normal use and with proper installation, maintenance and cleaning.

Additionally MKNA offers a LIMITED 10 YEAR WARRANTY on all equipment that MKNA is the original manufacturer of, to be free from defect and workmanship.¹

This warranty is extended by MKNA only to CUSTOMER, and is non-transferable. All warranty requests shall be made by CUSTOMER.

MKNA will replace or repair, at our factory or any other location we designate², any defective part within the warranty period and without charge. It is at MKNA's sole discretion whether to repair or replace. CUSTOMER will provide MKNA with a prompt written notice of the defect, including the serial number of the unit (when applicable) and the date of delivery.

At MKNA's request CUSTOMER will return all defective parts for evaluation at MKNA. MKNA will provide CUSTOMER with a return goods authorization number (RGA#). No parts will be returned without a RGA#. The RGA# must clearly be marked on all labels, packages and packing slips.

CUSTOMER shall pay all costs for packaging, shipping, duties and/or any other related costs in the sending or receiving of parts. CUSTOMER is responsible for all labor associated with sending or receiving of parts.

MKNA PROVIDES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE; UNLESS IT IS AGREED TO BY MKNA AND CUSTOMER IN WRITING PRIOR TO PLACEMENT OF ORDER. Such agreement requires approval of MKNA Management.

UNDER NO CIRCUMSTANCES SHALL MKNA BE HELD LIABLE FOR DAMAGES OR LIABILITY FOR LOSS OF PRODUCTION, PRODUCT, EQUIPMENT OR PROFITS OR LIABILITY FOR DIRECT, INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES TO PERSONS OR PROPERTY, WHATSOEVER. CUSTOMER agrees that it is their sole remedy for liability of any kind, including negligence with respect to the equipment and services furnished by MKNA shall be limited to the remedies provided herein. This warranty shall not apply to any failure of the unit or its components caused by lack of maintenance and/or improper maintenance, incorrect adjustments, misuse or unreasonable use or exposure to chemicals and/or environments which the unit is not designed for. Unauthorized modification of the unit or the use of non-MKNA replacement parts and building components voids this warranty.

¹ The limited 10 year warranty does not apply to equipment and components manufactured by others. Such equipment and components are subject to any limitation contained in the original manufacturer's warranty and include, but are not limited to: bearings, belts, casters, controllers, motors and pneumatic devices.

² No work will be performed by MKNA or an MKNA factory authorized service representative at the site of installation unless in MKNA's opinion it is impractical for Customer to remove and return the defective part to MKNA's factory.

EXCEPT AS EXPRESSLY STATED HEREIN, THERE ARE NO WARRANTIES, EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE, OF THE EQUIPMENT OR SERVICES FURNISHED BY MKNA OR FACTORY AUTHORIZED SERVICE REPRESENTATIVE. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.

mk North America, Inc. reserves the right to change, modify or discontinue products and/or specifications with or without notice.


All of mk North America, Inc. products are covered by this warranty.

Technical Documentation
ZRF-P 3000

5 SAFETY REQUIREMENTS

5.1 Warnings - Safety Guidelines

READ AND UNDERSTAND ALL OF THESE WARNINGS PRIOR TO OPERATING EQUIPMENT.

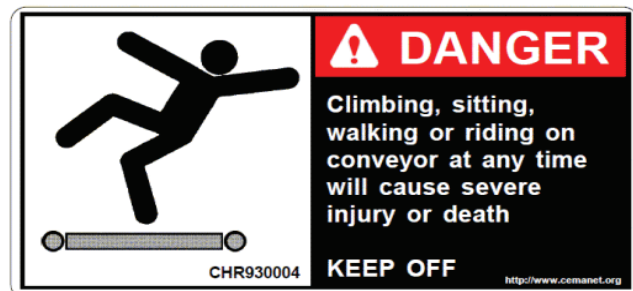

! WARNING

Loosening conveyor supports can cause the conveyor to drop down, causing severe injury. ALWAYS SUPPORT CONVEYOR PRIOR TO LOOSENING STANDS.

! WARNING

Injury is possible if the conveyor stands are not lagged to the floor, cross ties are not used, or angle braces are not used. Never place a conveyor into operation until all mounts are installed and secured. *It is the end user responsibility to ensure the conveyor is installed on a safe and secure support system.*

! WARNING

Never operate equipment unless all operating instructions are read and understood. Keep this manual.

Never operate equipment unless all guards and safety devices are in place and functioning properly.

! WARNING

NEVER OPERATE OR SERVICE THIS EQUIPMENT UNDER THE INFLUENCE.

Technical Documentation

ZRF-P 3000

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS

| | | |
|-----|--|----|
| 6.1 | Important Notes About Wear Items & Maintenance | 11 |
| 6.2 | ZRF-P 3000 AF - 3-Phase Motor Option | 12 |
| 6.3 | ZRF-P 3000 AF - Brushless DC Motor Option | 14 |

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS (CONT.)

6.1 Important Notes About Wear Items & Maintenance

The following information regarding life of the wear items and service or adjustment intervals of the functional elements are only GUIDELINES. Conveyors are application-specific products whose life expectancy can vary depending on their relative loads and speeds, and which can be significantly influenced by environmental factors.


- All moving components and screw connections should be checked every 6 months.
- All safety-relevant components should be part of a regularly scheduled weekly inspection
- The proper function of these components must be confirmed at all times.
- Do NOT operate conveyors if safety-relevant components are damaged or missing.
- All parts which contact the product should be cleaned weekly (example: belt).
- Remove heavy grease coatings with ethyl alcohol.
- Blow off debris from belts with structured surfaces using compressed air.

Technical Documentation

ZRF-P 3000

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS (CONT.)

6.2 ZRF-P 3000 AF - 3-Phase Gearmotor Option

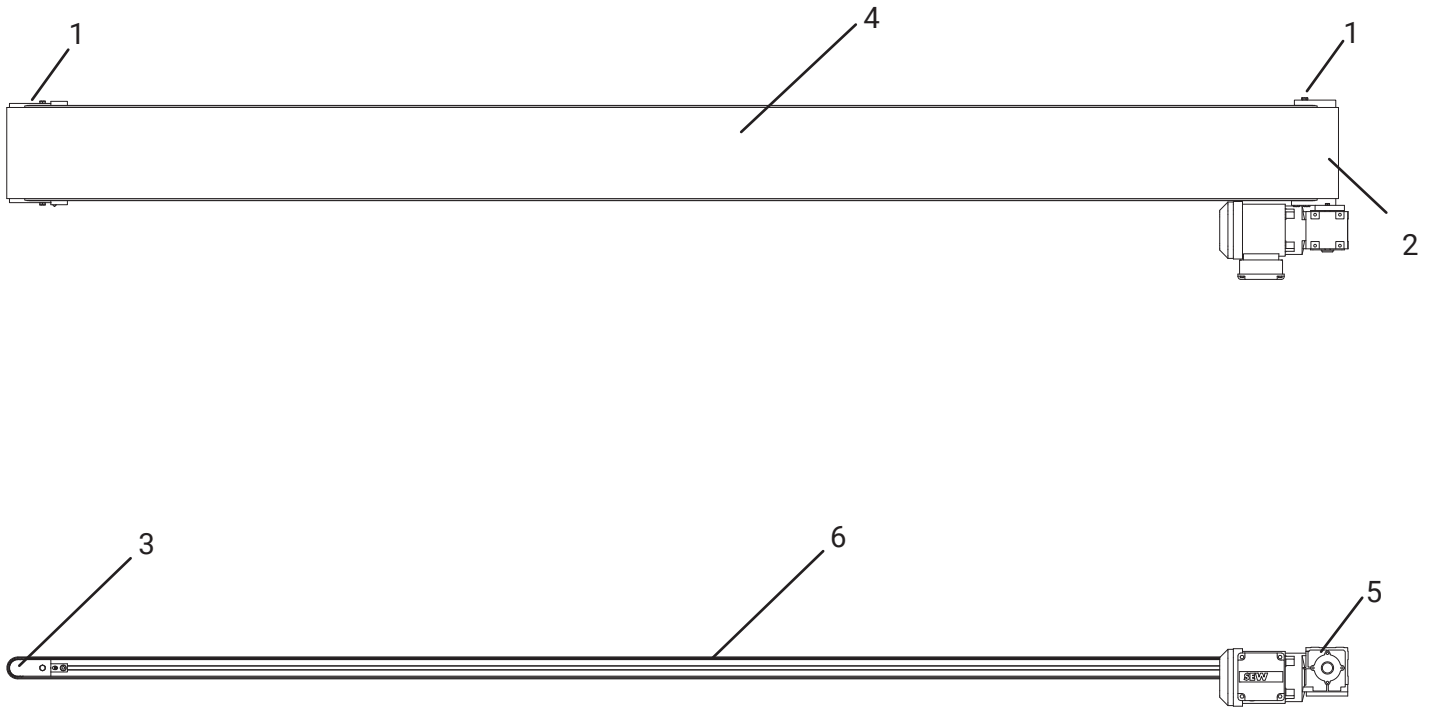

NOTE: Not all items shown in all views for clarity.

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS (CONT.)

6.2 ZRF-P 3000 AF - 3-Phase Gearmotor Option (Cont.)

Maintenance Work for ZRF-P 3000 AF

| Position | Description | Action* | Interval in Hours (Months) |
|----------|----------------|---------|--|
| 1 | Roller Bearing | I | 1,000 Hours (Max. 6 Months) |
| 2 | Drive Sprocket | I | 500 Hours (Max. 3 Months) |
| 3 | Idler Drum | I | 500 Hours (Max. 3 Months) |
| 4 | Timing Belt | I, C | 500 Hours (Max. 3 Months) |
| | | R | If wear visible |
| | | T | As needed |
| 5 | Gearmotor | I, C | Service & maintenance per manufacturer's documentation |
| 6 | Sliderbed | I, C | 500 Hours (Max. 3 Months) |

* LEGEND: *Inspect, Replace, Tension, Clean*

Wear items for ZRF-P 3000 AF

| Position | Description | Part Number |
|----------|----------------|-------------------------------|
| 1 | Roller Bearing | Inquire with mk North America |
| 2 | Drive Sprocket | Inquire with mk North America |
| 3 | Idler drum | Inquire with mk North America |
| 4 | Timing Belt | Inquire with mk North America |
| 5 | Gearmotor | Inquire with mk North America |
| 6 | Sliderbed | Inquire with mk North America |


(Cont.)

Technical Documentation

ZRF-P 3000

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS (CONT.)

6.2 ZRF-P 3000 AF - DC Gearmotor Option

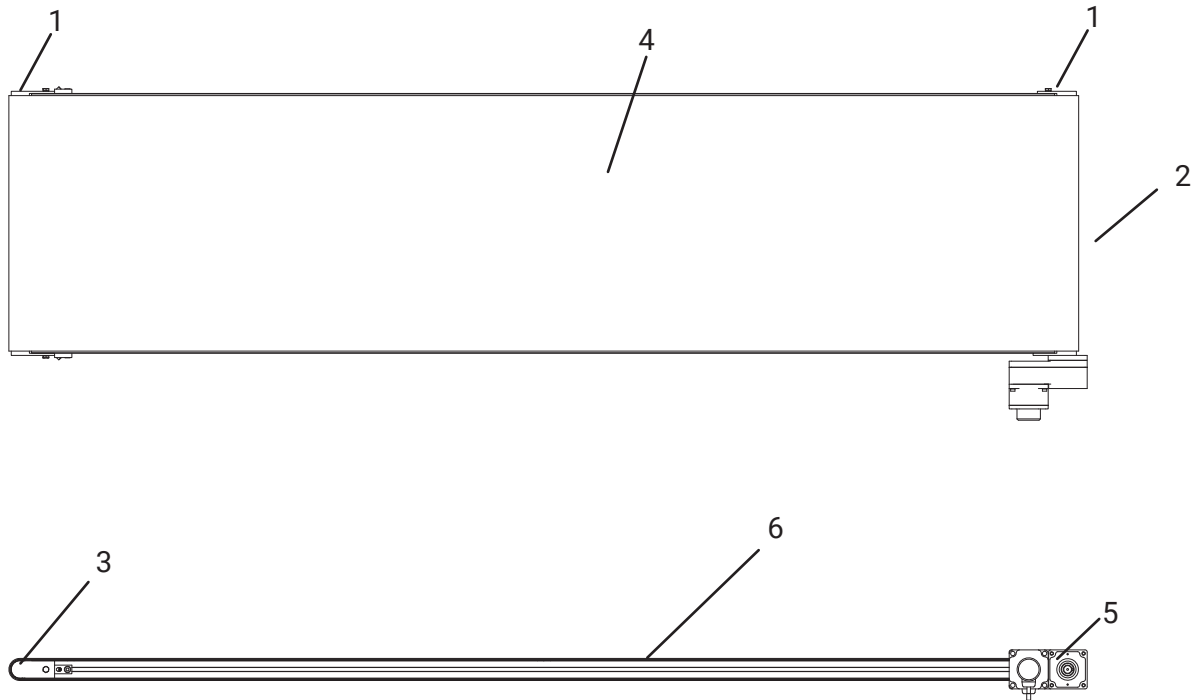

NOTE: Not all items shown in all views for clarity.

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS (CONT.)

6.2 ZRF-P 3000 AF - DC Gearmotor Option (Cont.)

Maintenance Work for ZRF-P 3000 AF

| Position | Description | Action* | Interval in Hours (Months) |
|----------|------------------------|---------|--|
| 1 | Roller Bearing | I | 1,000 Hours (Max. 6 Months) |
| 2 | Drive Sprocket | I | 500 Hours (Max. 3 Months) |
| 3 | Idler Drum | I | 500 Hours (Max. 3 Months) |
| 4 | Timing Belt | I, C | 500 Hours (Max. 3 Months) |
| | | R | If wear visible |
| | | T | As needed |
| 5 | Brushless DC Gearmotor | I, C | Service & maintenance per manufacturer's documentation |
| 6 | Sliderbed | I, C | 500 Hours (Max. 3 Months) |

* LEGEND: *Inspect, Replace, Tension, Clean*

| Position | Description | Part Number |
|----------|------------------------|-------------------------------|
| 1 | Roller Bearing | Inquire with mk North America |
| 2 | Drive Sprocket | Inquire with mk North America |
| 3 | Idler Drum | Inquire with mk North America |
| 4 | Timing Belt | Inquire with mk North America |
| 5 | Brushless DC Gearmotor | Inquire with mk North America |
| 6 | Sliderbed | Inquire with mk North America |

(Cont.)

Technical Documentation

ZRF-P 3000

7 CONVEYOR MAINTENANCE - BELT TENSIONING



All work to be performed by qualified personnel only.
Conveyor power must be disconnected before replacing the belt.

7.1 Standard Idler

17

General Remarks:

- Timing belts may need to be tracked due to shifting during shipping.
- Prior to delivery of the mk conveyor, the belt was tensioned and tracked at the factory.
- Belt tracking should only be done at the idler end.
- Avoid over tensioning the belt, increase slack in timing belt if necessary.

7 CONVEYOR MAINTENANCE - BELT TENSIONING

(CONT.)

7.1 Standard Idler




All work to be performed by qualified personnel only.

Caution!

Belt tensioning is only to be done at the idler end (opposite the motor end). This conveyor requires a centenary sag in the belt. DO NOT OVER TENSION.

- The belt was tensioned and adjusted at the factory before delivery of the mk product.


Loosen bolt (2) and screw (4) to pull the entire assembly out (arrow direction) in order to pretension the timing belt.

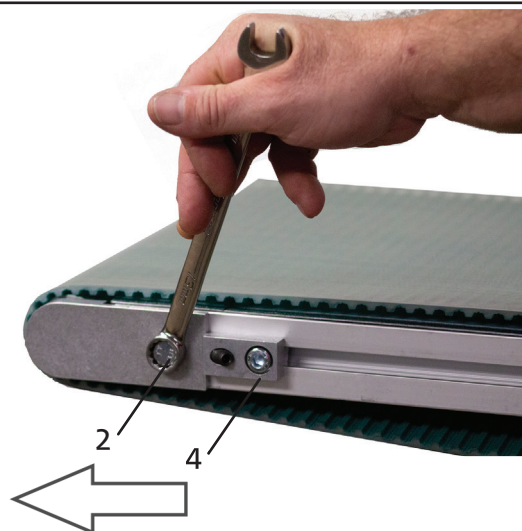

Use set screw (3) to align the roller holders (1) on both sides of the conveyor frame. Use a square to ensure roller holders are squared with one another.

Tighten bolt (2) and screw (4) before powering up the conveyor.

- Ensure that the guide on the underside of the belt is sitting in the mating groove in the rolls and frame before completing work.

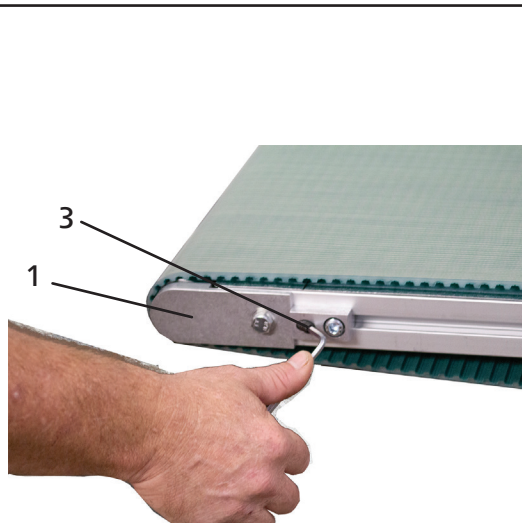

Technical Documentation

ZRF-P 3000

8 CONVEYOR MAINTENANCE - TIMING BELT REPLACEMENT



All work to be performed by qualified personnel only.
Conveyor power must be disconnected before replacing the belt.

8.1 Standard Idler

19

General Remarks:

- Prior to replacing the timing belt, the tail assembly must be completely loosened and retracted – instructions for this to follow.
- Any auxiliary parts that interfere must be removed.
- One side of the conveyor must be free and clear of all interferences. THIS IS BEST DONE ON THE SIDE WITHOUT THE GEARMOTOR MOUNT.
- Reassemble in reverse order.
- Replacement timing belts must be tensioned prior to use. (See Section 7)

8 CONVEYOR MAINTENANCE - TIMING BELT REPLACEMENT (CONT.)

8.1 Standard Idler



All work to be performed by qualified personnel only.

Loosen bolt (2) and screw (4).

Push the entire tail assembly (1) and alignment blocks (5) inward (arrow direction) to loosen belt. Snug bolts (2).

Additional Instructions:

- The belt can now be replaced once all auxiliary obstructions are removed.
- Slide the existing belt off the free side of the conveyor frame.
- To replace belt, slip it over the side of the conveyor.
- Reassemble conveyor in the reverse order.
- Tension belt prior to use. (see Section 7)



Technical Documentation

ZRF-P 3000

9 CONVEYOR MAINTENANCE - TIMING BELT REPLACEMENT



All work to be performed by qualified personnel only.
Conveyor power must be disconnected before replacing the belt.

General Remarks:

- Follow the steps in section 8 for removing the belt.
- Remove slider bed and replace with a new one.
- Reassemble in reverse order.
- Timing belts must be tensioned prior to use. (See Section 7)

10 NOTES & CONTACT INFORMATION

(CONT.)

10.2 Contacting mk North America, Inc.



Email: sales@mknorthamerica.com



Phone: 860.769.5500



Fax: (860) 769-5505

Technical Documentation
ZRF-P 3000
Timing Belt Conveyor

mk North America, Inc.

an mk Technology Group Company

105-125 Highland Park Drive
Bloomfield, CT 06002, USA

Phone: (860) 769-5500

Fax: (860) 769-5505

www.mknorthamerica.com

sales@mknorthamerica.com