



Technical
Documentation

KFG-P 2000 INCLINE BELT CONVEYOR

Each serial number is unique to that specific unit and provides mk North America with complete order details.

The serial number is located on the frame of the conveyor. See section 2 for more details.

Technical Documentation

KFG-P 2000

1	General Information	3
2	Decoding Your Serial Number	4
3	Conveyor Description	5
4	Warranty Information	7
5	Safety Requirements	8
6	Wear Items & Maintenance For Specific Drive & Tail Options	9
7	Conveyor Belt Maintenance - Tensioning & Tracking	18
8	Conveyor Belt Maintenance - Belt Replacement	20
9	Conveyor Maintenance - Tensioning & Greasing Of Drive Chain	22
10	Contact Information	26

1 GENERAL INFORMATION

1.1 Foreword

Congratulations on purchasing a conveyor from mk North America, Inc., a leading manufacturer of quality low profile conveyors. Our more than 30 years experience in material handling allows us to offer robust solutions with long life and reliable operation. We strive to make the best products in the industry even better and we are committed to making sure our customers get top notch support before, during, and after each and every sale.

1.2 The importance of reading your manual

Inside this manual you will find the instructions on how to set up and maintain your mk conveyor properly, as well as maximize its performance. Please take the time to read this manual and familiarize yourself with these set up and maintenance instructions. These instructions will help assure a long product life that requires a minimum amount of service and keeps your conveyor working at its maximum capacity.

1.3 If you need assistance

If you need assistance there are a variety of ways to get it. You can contact our customer service team Monday through Friday, 8am-5pm (Eastern Time) at (860) 769-5500. You can also visit our website for additional information and technical documentation at www.mknorthamerica.com. In addition, your local representative can provide support in many instances.

1.4 When your shipment arrives

- 1) Check your shipment
 - a) If you have not already done so, visually inspect the shipping crate/container for any damage caused during shipment.
 - b) Carefully unpack the crate/container making sure to inspect the components for damage that may have occurred inside the packaging materials.
 - c) If you find any damage, please contact the carrier and mk North America, Inc.
 - d) Lastly, check the contents against the packing slip provided by mk for any discrepancies. If you should find any, please contact mk North America, Inc.

- 2) Locate your ordered items
 - a) Each mk conveyor will ship in its own custom built container, carefully packaged in the most economical way.
 - b) Review the packing slip against your Purchase Order.

Technical Documentation

KFG-P 2000

2 SERIAL NUMBER LABEL

- The conveyor's serial number is located on the frame at the drive end of the conveyor.

	Type:	<input type="text"/>	Date:	<input type="text"/>
	Serial #:	<input type="text"/>	CO #:	<input type="text"/>
	Drawing #:	<input type="text"/>		
	www.mknorthamerica.com (860) 769-5500			
Scan for Documentation				

Type:

This description refers to the type of unit that is associated with the particular serial number. The type should NOT be substituted for the serial number when inquiring.

Serial #:

This number is unique to this item. With this number we can access all of the original order details.

Drawing #:

This number, if applicable, refers to the specific drawing that was created for this unit.

Date:

This is the date that the unit was scheduled to ship.

CO#:


This is the customer order number in which this unit was built. This is an mk North America, Inc. internal number. This number is also referenced on any related invoices, etc.

Scan for Documentation:

Scanning this QR code will bring you to a webpage specific for the conveyor on this order. From here you can access drawings and spare parts.

3 CONVEYOR DESCRIPTION

3.1 Explaining the conveyor **TYPE**.

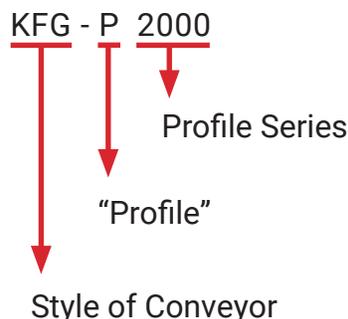

Style of Conveyor

DGF (Doppel-Gurt Foerderer) Dual-Belt Conveyor

GUF (Gurt Foerderer) Belt Conveyor

KFG (Knickfoerderer Gurt) Bent "Gooseneck" Belt Conveyor

KFM (Knickföeder Modular) Bent "Gooseneck" Plastic Modular Belt Conveyor

KGF (Kurvengurt Foerderer) Curve Belt Conveyor

KMF (Kurvengängiges Modulband) Curved Modular Belt Conveyor

KTF (Kettengurt Foerderer) Chain Conveyor

MBF (Modulband Foerderer) Modular Belt Conveyor

RBM (Rollenbahn Motor) Motorized Roller Conveyor

RBS (Rollenbahn Schwerkraft) Idler Roller Conveyor

RBT (Rollenbahn Tangentialkette) Drive Roller Conveyor

SBF (Scharnierband Foerderer) Hinged Belt Conveyor

SPU (Staufaehiges Pallettenumlaufsystem) Continuous Motion Pallet Conveyor

SRF (Staurollen Foerderer) Accumulating Roller Conveyor

TKU (Taktkettenförderer) Timing Chain Conveyor

ZRF (Zahnriemen Förderer) Timing Belt Conveyor

Technical Documentation


KFG-P 2000

3 CONVEYOR DESCRIPTION

(CONT.)

3.2 Conveyor Components

The KFG-P 2000 has many typical conveyor components. Below is a description of the basic parts and options for the KFG-P 2000 conveyor. The items you receive will vary based on your actual purchase order. Items may appear different on your model based on your particular order requirements. Consult your approval drawing for specifics items included in your order.

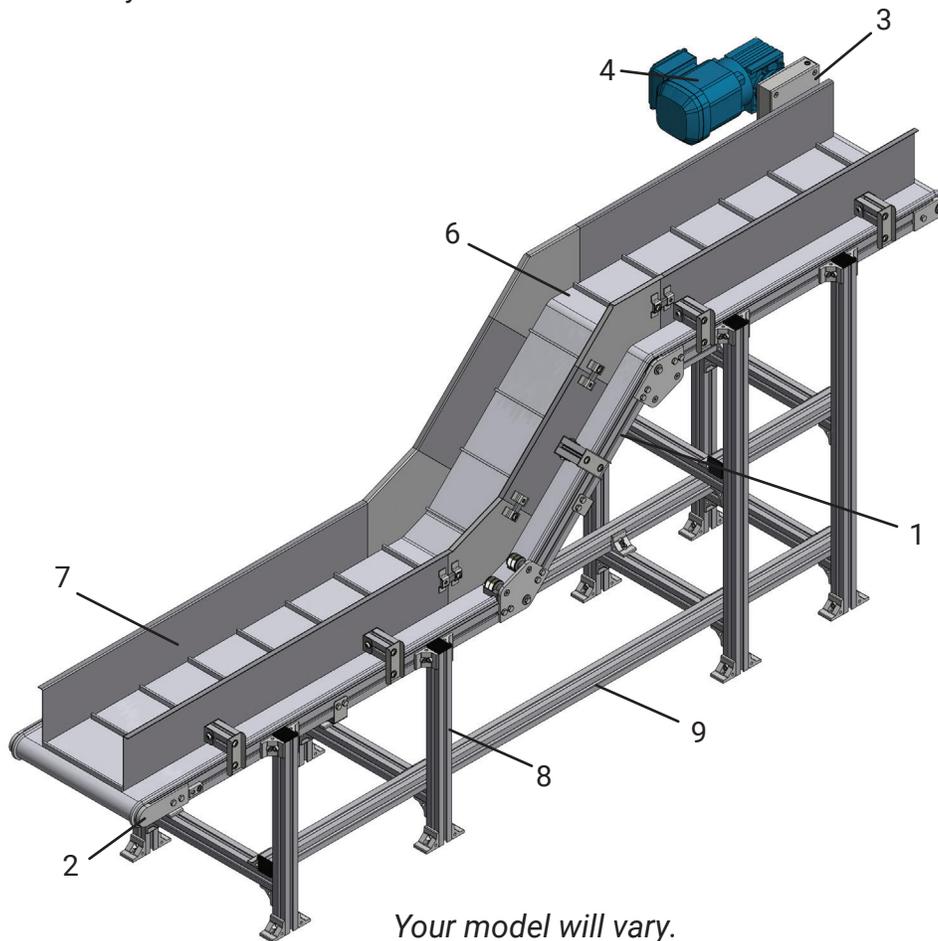

Typical Components

- 1) Conveyor Frame
- 2) Idler End
- 3) Gearmotor Mount/Drive Assembly
- 4) Gearmotor
- 5) Speed Control (Not Shown)
- 6) Belt
- 7) Side Rails
- 8) Support Stand
- 9) Stand Stringer

4 WARRANTY INFORMATION

Warranty

mk North America, Inc. (MKNA) offers a COMPLETE ONE YEAR WARRANTY from the date of delivery, to the original purchaser of the MKNA equipment (CUSTOMER), to be free from defects in material and workmanship; under normal use and with proper installation, maintenance and cleaning.

Additionally MKNA offers a LIMITED 10 YEAR WARRANTY on all equipment that MKNA is the original manufacturer of, to be free from defect and workmanship.¹

This warranty is extended by MKNA only to CUSTOMER, and is non-transferable. All warranty requests shall be made by CUSTOMER.

MKNA will replace or repair, at our factory or any other location we designate², any defective part within the warranty period and without charge. It is at MKNA's sole discretion whether to repair or replace. CUSTOMER will provide MKNA with a prompt written notice of the defect, including the serial number of the unit (when applicable) and the date of delivery.

At MKNA's request CUSTOMER will return all defective parts for evaluation at MKNA. MKNA will provide CUSTOMER with a return goods authorization number (RGA#). No parts will be returned without a RGA#. The RGA# must clearly be marked on all labels, packages and packing slips.

CUSTOMER shall pay all costs for packaging, shipping, duties and/or any other related costs in the sending or receiving of parts. CUSTOMER is responsible for all labor associated with sending or receiving of parts.

MKNA PROVIDES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE; UNLESS IT IS AGREED TO BY MKNA AND CUSTOMER IN WRITING PRIOR TO PLACEMENT OF ORDER. Such agreement requires approval of MKNA Management.

UNDER NO CIRCUMSTANCES SHALL MKNA BE HELD LIABLE FOR DAMAGES OR LIABILITY FOR LOSS OF PRODUCTION, PRODUCT, EQUIPMENT OR PROFITS OR LIABILITY FOR DIRECT, INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES TO PERSONS OR PROPERTY, WHATSOEVER. CUSTOMER agrees that it is their sole remedy for liability of any kind, including negligence with respect to the equipment and services furnished by MKNA shall be limited to the remedies provided herein. This warranty shall not apply to any failure of the unit or its components caused by lack of maintenance and/or improper maintenance, incorrect adjustments, misuse or unreasonable use or exposure to chemicals and/or environments which the unit is not designed for. Unauthorized modification of the unit or the use of non-MKNA replacement parts and building components voids this warranty.

¹ The limited 10 year warranty does not apply to equipment and components manufactured by others. Such equipment and components are subject to any limitation contained in the original manufacturer's warranty and include, but are not limited to: bearings, belts, casters, controllers, motors and pneumatic devices.

² No work will be performed by MKNA or an MKNA factory authorized service representative at the site of installation unless in MKNA's opinion it is impractical for Customer to remove and return the defective part to MKNA's factory.

EXCEPT AS EXPRESSLY STATED HEREIN, THERE ARE NO WARRANTIES, EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE, OF THE EQUIPMENT OR SERVICES FURNISHED BY MKNA OR FACTORY AUTHORIZED SERVICE REPRESENTATIVE. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.

mk North America, Inc. reserves the right to change, modify or discontinue products and/or specifications with or without notice.

All of mk North America, Inc. products are covered by this warranty.

Technical Documentation

KFG-P 2000

5 SAFETY REQUIREMENTS

READ AND UNDERSTAND ALL OF THESE WARNINGS PRIOR TO OPERATING EQUIPMENT.

CAUTION



Read this manual before operating conveyors.

CAUTION



Never operate or service equipment under the influence of drugs and/or alcohol.

CAUTION



Lock out power before servicing the conveyor.

WARNING



Do NOT operate conveyors without guards in place.

Severe injury can occur.

IMPORTANT



Conveyors must be installed so that they are square and level – across the belt. Failure to install conveyors correctly may cause premature equipment failure and/or product damage.

WARNING



Do not operate conveyors in an explosive environment.

DANGER



Moving equipment can cause severe injury or death.

Do NOT touch moving parts. Lock out power before servicing.

WARNING



Gearmotors will be hot. Do NOT touch.

Severe injury can occur.

DANGER



Climbing, sitting, walking or riding on the conveyor at any time could result in severe injury or death.

KEEP OFF!

DANGER



Always support conveyor sections prior to loosening stands or supports. Loosening stands or supports can cause the conveyor to fall creating a crush hazard.

NOTICE



All work should be done by qualified professionals. This includes electricians for all wiring.

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS

6.1	Important Notes About Wear Items & Maintenance	9
6.2	KFG-P 2000 AC	10
6.3	KFG-P 2000 AF	12
6.4	KFG-P 2000 AS	14
6.5	KFG-P 2000 AU	16

6.1 Important Notes About Wear Items & Maintenance


The following information regarding life of the wear items and service or adjustment intervals of the functional elements are only GUIDELINES. Conveyors are application-specific products whose life expectancy can vary depending on their relative loads and speeds, and which can be significantly influenced by environmental factors.

- All moving components and screw connections should be checked every 6 months.
- All safety-relevant components should be part of a regularly scheduled weekly inspection
- The proper function of these components must be confirmed at all times.
- Do NOT operate conveyors if safety-relevant components are damaged or missing.
- All parts which contact the product should be cleaned weekly (example: belt).
- Belts require little special care. They are easily cleaned using lukewarm soapy water.
- Remove heavy grease coatings with ethyl alcohol.
- Blow off debris from belts with structured surfaces using compressed air.

Technical Documentation KFG-P 2000

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS (CONT.)

6.2 KFG-P 2000 AC

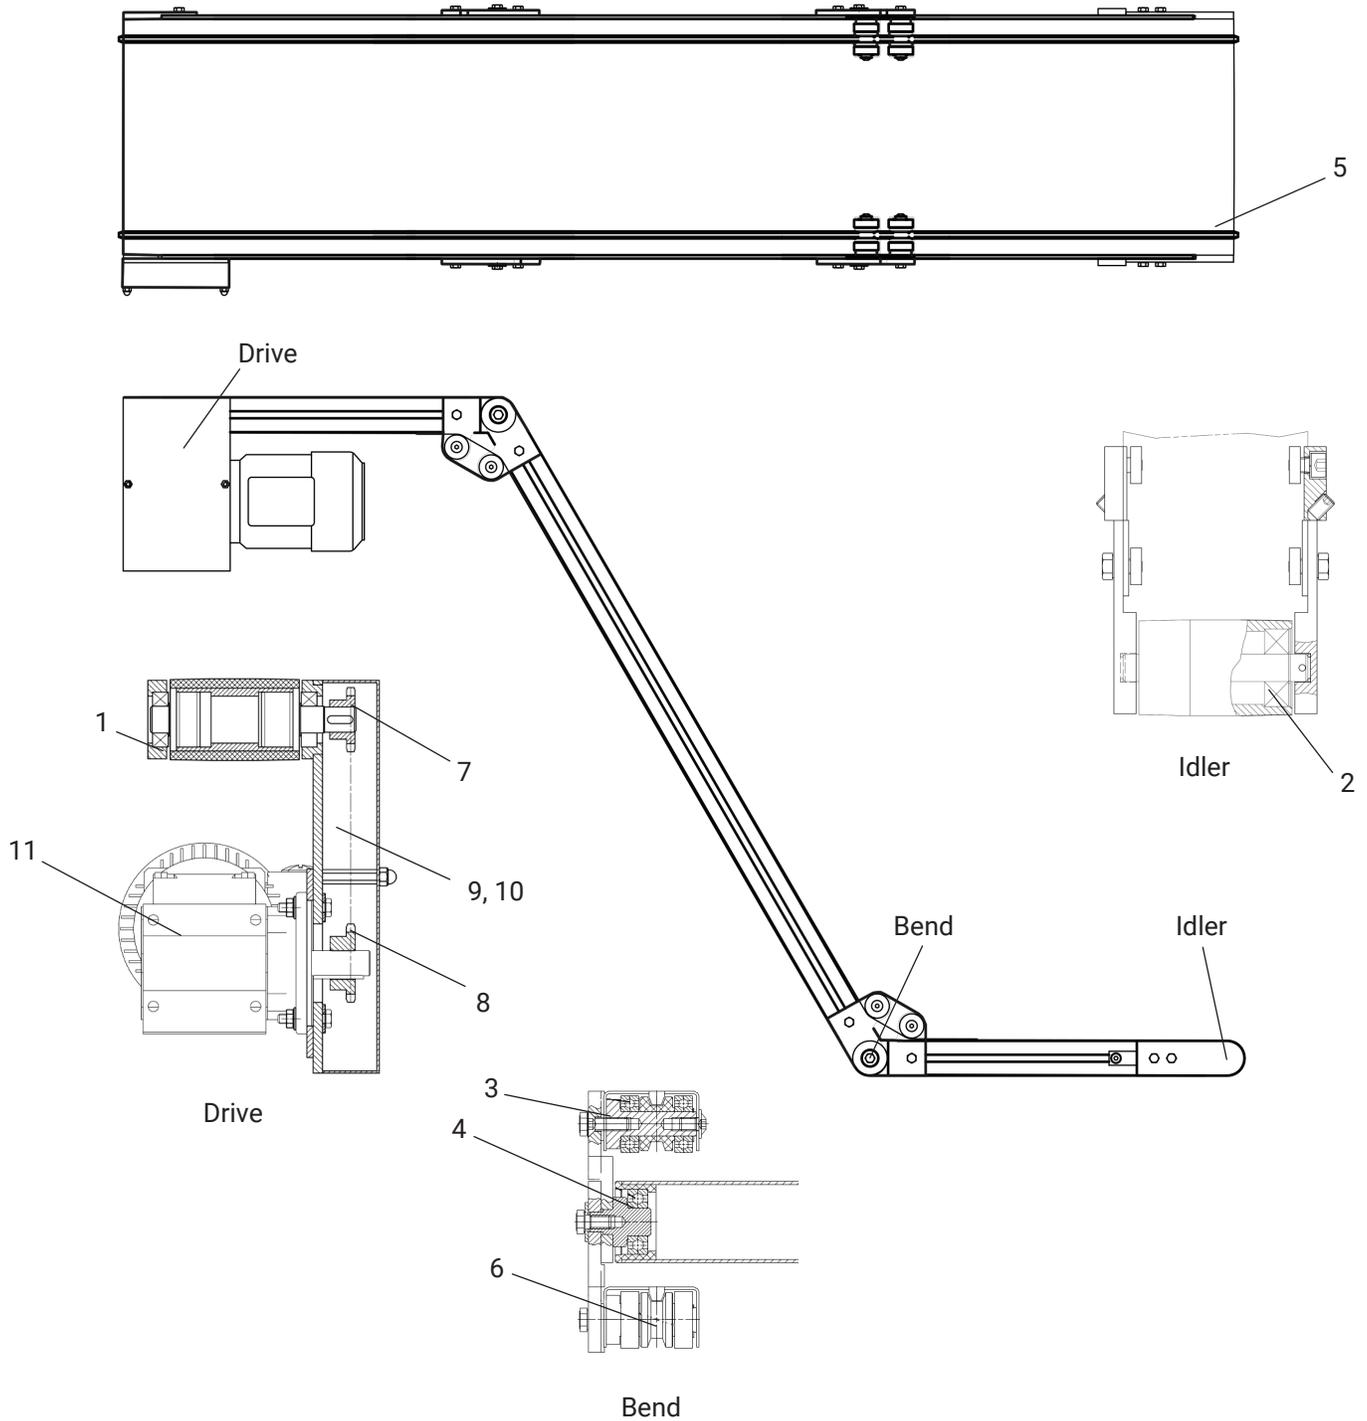

NOTE: Not all items shown in all views for clarity.

(Cont.)

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS (CONT.)

6.2 KFG-P 2000 AC (Cont.)

Maintenance Work for KFG-P 2000 AC

Position	Description	Action*	Interval in Hours (Months)	Lubricant
1, 2, 3, 4	Roller Bearing	I	1,000 Hours (Max. 6 Months)	
5	Belt	I, C	500 Hours (Max. 3 Months)	
7, 8	Sprocket	I, C	1,000 Hours (Max. 6 Months)	SAE20-SAE50
9, 10	Chain & Connecting Link	I, C, L, T	500 Hours (Max. 3 Months)	SAE20-SAE50
		R	If max. stretch is 3% of greater	
11	Gearmotor	I	Service & Maintenance per manufacturer's documentation	

* LEGEND: *Inspect, Replace, Tension, Clean, Lubricate (grease).*

Wear Items for KFG-P 2000 AC


Position	Description	Part Number
1	Roller Bearing 6003-2RS1	K101000383
2	Roller Bearing 6302-2RS1	K101000378
3	Roller Bearing 6202-2RS1	K101000373
4	Roller Bearing 6203-2RS1	K101000388
5	Belt	Inquire with mk North America
6	Bend V-Guide	19.03.0002
7	Sprocket at Drive Roll	Inquire with mk North America
8	Sprocket at Gearmotor	Inquire with mk North America
9	Roller Chain	Inquire with mk North America
10	Roller Chain Connecting Link	Inquire with mk North America
11	Gearmotor	Inquire with mk North America

NOTE: For adjusting the chain tensioning, please see the related section for details. When cleaning the chain, avoid any harsh chemicals or detergents.

Technical Documentation KFG-P 2000

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS (CONT.)

6.3 KFG-P 2000 AF

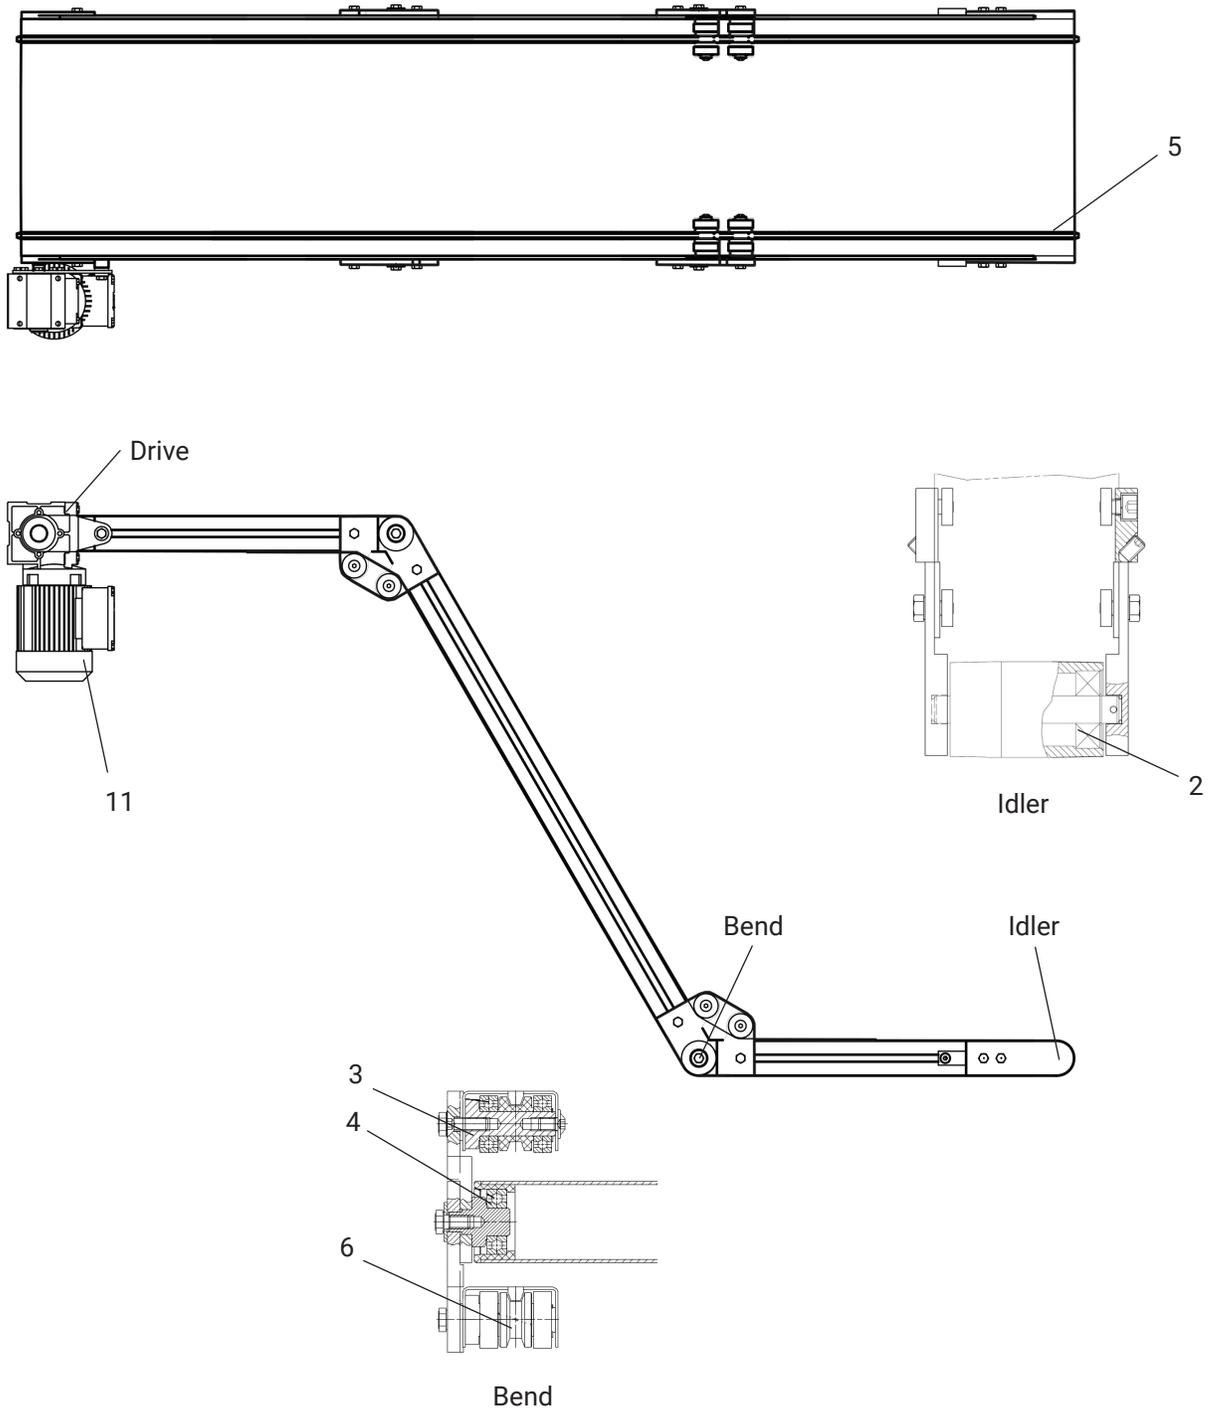

NOTE: Not all items shown in all views for clarity.

(Cont.)

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS (CONT.)

6.3 KFG-P 2000 AF (Cont.)

Maintenance Work for SRF-P 2012 AF

Position	Description	Action*	Interval in Hours (Months)	Lubricant
2, 3, 4	Roller Bearing	I	1,000 Hours (Max. 6 Months)	
5	Belt	I, C	500 Hours (Max. 3 Months)	
11	Gearmotor	I	Service & Maintenance per manufacturer's documentations	

* LEGEND: *Inspect, Replace, Tension, Clean, Lubricate (grease).*

Wear Items for KFG-P 2000 AF


Position	Description	Part Number
2	Roller Bearing 6302-2RS1	K101000378
3	Roller Bearing 6202-2RS1	K101000373
4	Roller Bearing 6203-2RS1	K101000388
5	Belt	Inquire with mk North America
6	Bend V-Guide	19.03.0002
11	Gearmotor	Inquire with mk North America

NOTE: For adjusting the chain tensioning, please see the related section for details. When cleaning the chain, avoid any harsh chemicals or detergents.

Technical Documentation KFG-P 2000

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS (CONT.)

6.4 KFG-P 2000 AS

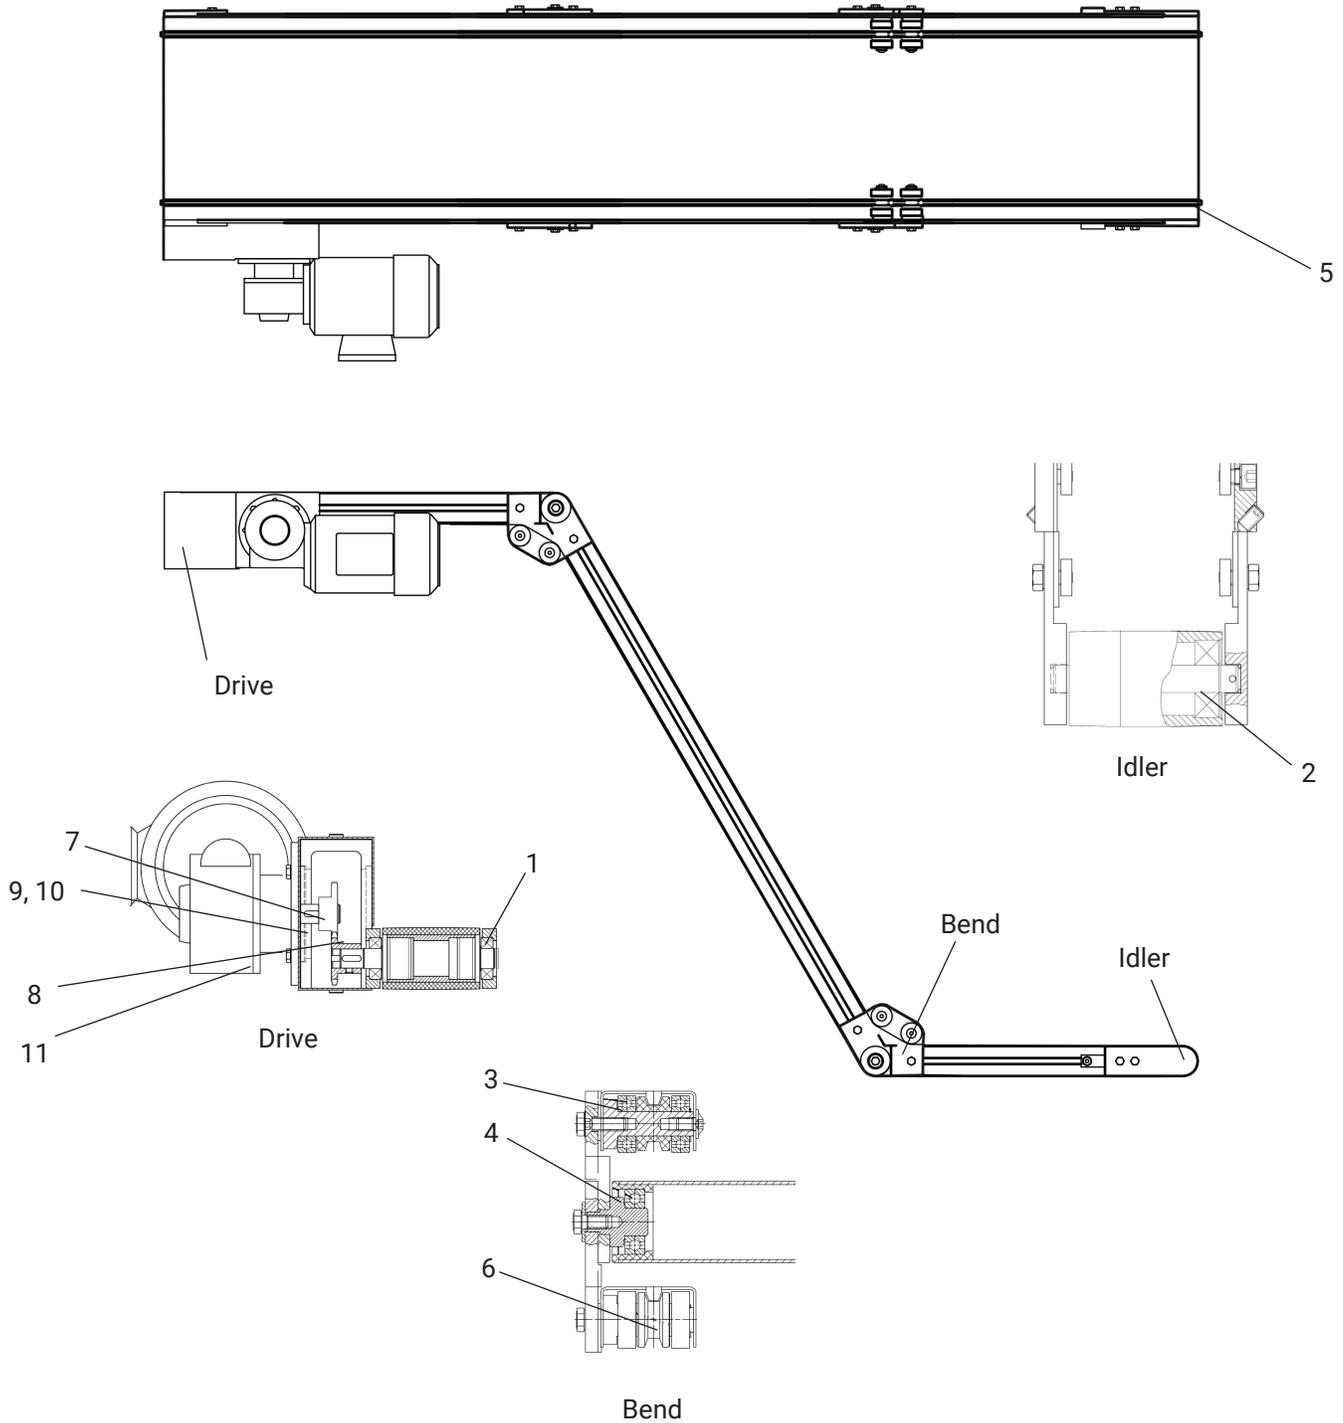

NOTE: Not all items shown in all views for clarity.

(Cont.)

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS (CONT.)

6.4 KFG-P 2000 AS (Cont.)

Maintenance Work for KFG-P 2000 AS

Position	Description	Action*	Interval in Hours (Months)	Lubricant
1, 2, 3, 4	Roller Bearing	I	1,000 Hours (Max. 6 Months)	
5	Belt	I, C	500 Hours (Max. 3 Months)	
7, 8	Sprocket	I, C	1,000 Hours (Max. 6 Months)	SAE20-SAE50
9, 10	Chain & Connecting Link	I, C, L, T	500 Hours (Max. 3 Months)	SAE20-SAE50
		R	If max. stretch is 3% of greater	
11	Gearmotor	I	Service & Maintenance per manufacturer's documentation	

* LEGEND: *Inspect, Replace, Tension, Clean, Lubricate (grease).*

Wear Items for KFG-P 2000 AS


Position	Description	Part Number
1	Roller Bearing 6003-2RS1	K101000383
2	Roller Bearing 6302-2RS1	K101000378
3	Roller Bearing 6202-2RS1	K101000373
4	Roller Bearing 6203-2RS1	K101000388
5	Belt	Inquire with mk North America
6	Bend V-Guide	19.03.0002
7	Sprocket at Drive Roll	Inquire with mk North America
8	Sprocket at Gearmotor	Inquire with mk North America
9	Roller Chain	Inquire with mk North America
10	Roller Chain Connecting Link	Inquire with mk North America
11	Gearmotor	Inquire with mk North America

NOTE: For adjusting the chain tensioning, please see the related section for details. When cleaning the chain, avoid any harsh chemicals or detergents.

Technical Documentation KFG-P 2000

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS (CONT.)

6.5 KFG-P 2000 AU

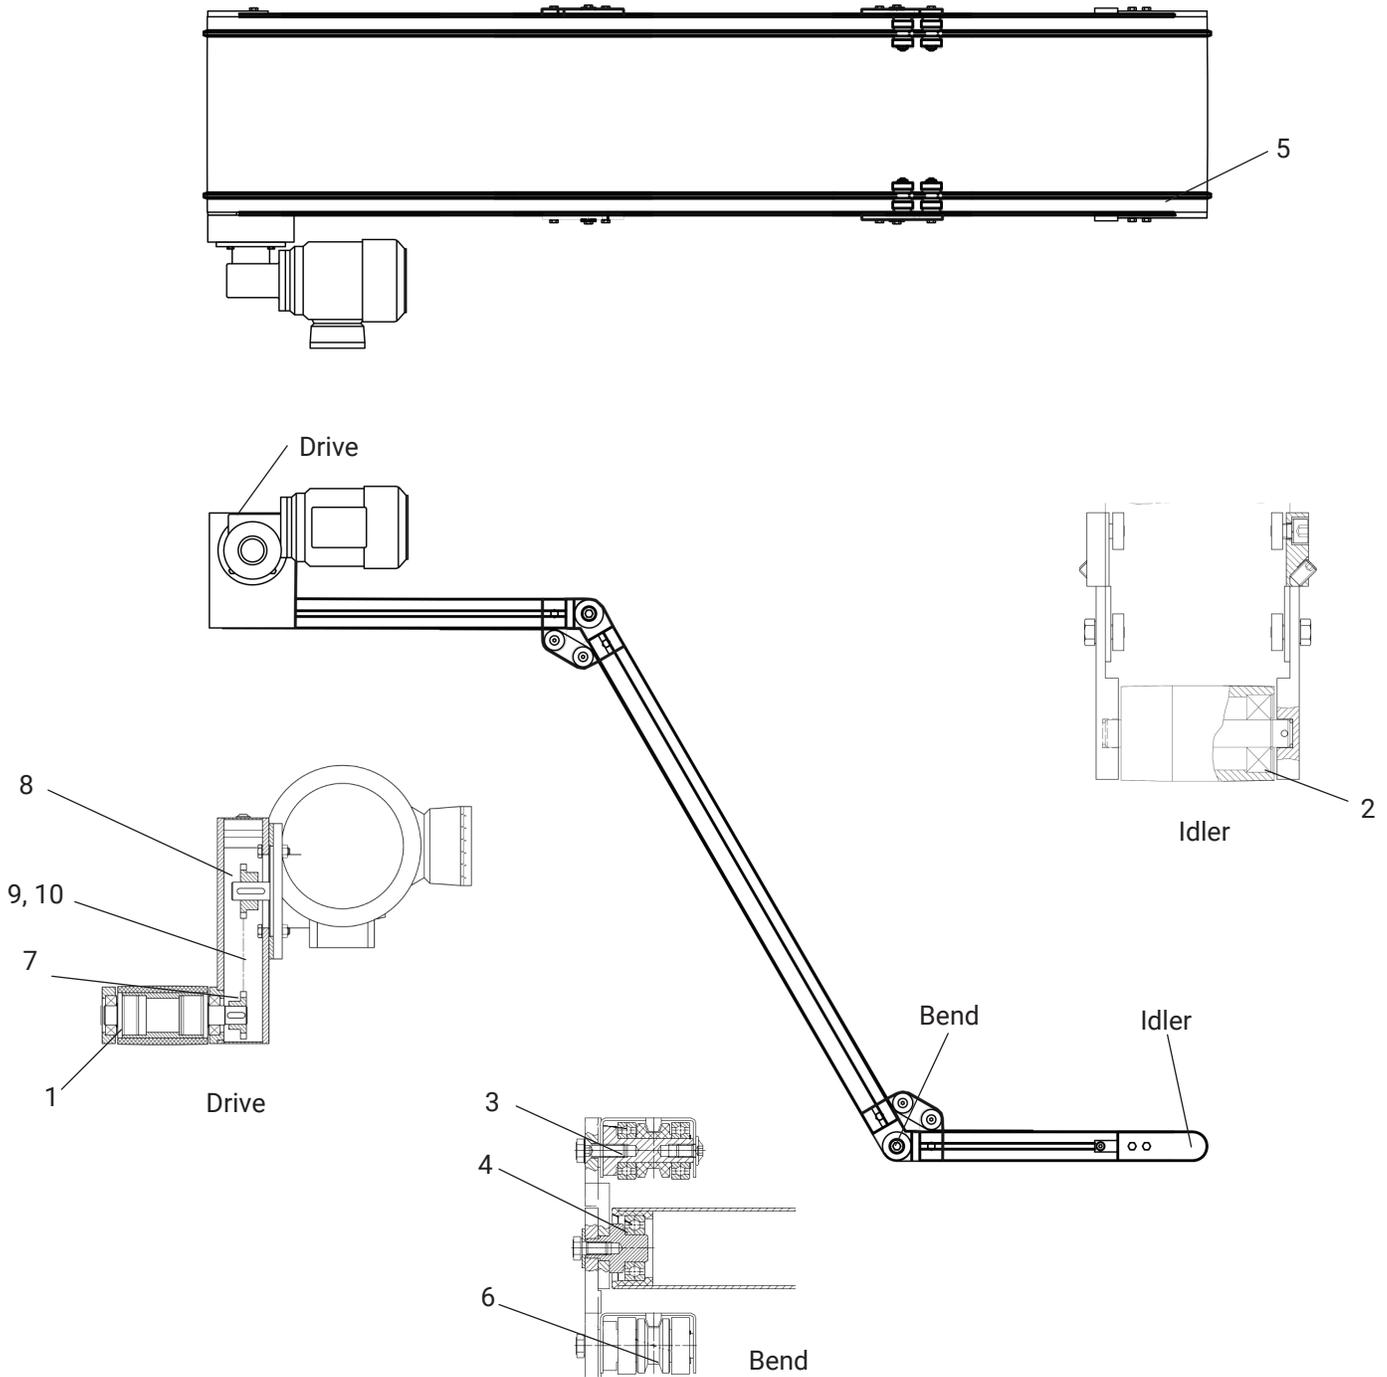

NOTE: Not all items shown in all views for clarity.

(Cont.)

6 WEAR ITEMS & MAINTENANCE FOR SPECIFIC DRIVE OPTIONS (CONT.)

6.5 KFG-P 2000 AU (Cont.)

Maintenance Work for KFG-P 2000 AU

Position	Description	Action*	Interval in Hours (Months)	Lubricant
1, 2, 3, 4	Roller Bearing	I	1,000 Hours (Max. 6 Months)	
5	Belt	I, C	500 Hours (Max. 3 Months)	
7, 8	Sprocket	I, C	1,000 Hours (Max. 6 Months)	SAE20-SAE50
9, 10	Chain & Connecting Link	I, C, L, T	500 Hours (Max. 3 Months)	SAE20-SAE50
		R	If max. stretch is 3% of greater	
11	Gearmotor	I	Service & Maintenance per manufacturer's documentation	

* LEGEND: *Inspect, Replace, Tension, Clean, Lubricate (grease).*

Wear Items for KFG-P 2000 AU

Position	Description	Part Number
1	Roller Bearing 6003-2RS1	K101000383
2	Roller Bearing 6302-2RS1	K101000378
3	Roller Bearing 6202-2RS1	K101000373
4	Roller Bearing 6203-2RS1	K101000388
5	Belt	Inquire with mk North America
6	Bend V-Guide	19.03.0002
7	Sprocket at Drive Roll	Inquire with mk North America
8	Sprocket at Gearmotor	Inquire with mk North America
9	Roller Chain	Inquire with mk North America
10	Roller Chain Connecting Link	Inquire with mk North America
11	Gearmotor	Inquire with mk North America

NOTE: For adjusting the chain tensioning, please see the related section for details. When cleaning the chain, avoid any harsh chemicals or detergents.

Technical Documentation

KFG-P 2000

7 CONVEYOR BELT MAINTENANCE - TENSIONING & TRACKING



All work to be performed by qualified personnel only.
Conveyor power must be disconnected before replacing belt.

7.1 Idler/Tail 01

21

General Remarks:

- Belts may need to be tracked due to shifting during shipping.
- Prior to delivery of the mk conveyor, the chain was tensioned and tracked at the factory.
- Belt pretension conveyor length x 0.3%.
- Alternate tightening set screws AND loosen the other side as applicable in order to avoid over tensioning the belt.
- Belt tracking should only be done at the idler end.

Tensioning and tracking is done while the conveyor is in operation. Use extreme caution of all pinch, pull and other hazards.

7 CONVEYOR BELT MAINTENANCE - TENSIONING & TRACKING (CONT.)

7.1 Idler/Tail 01



All work to be performed by qualified personnel only.
 Conveyor power must be disconnected before replacing belt.

Belt Tensioning

Caution!

Belt tensioning is only to be done at the idler end (opposite the drive end).


General instructions to be performed on both sides of conveyor:

Loosen screws (2) and (4) to move tension blocks and complete tail assembly (1) out (arrow direction) in order to pretension the belt. Tighten screw (4) and, using the fine adjustment set screw (3), continue to tension the belt until correct tension is achieved. Finally, tighten screw (2) and move alignment block back into ready position.

Pretension example:

Mark the belt surface with two lines spaced 1000 mm apart. After tensioning, this distance should measure 1003 mm. The conveyor is then ready for operation.

Fine-tune belt travel (see Belt Tracking, below).

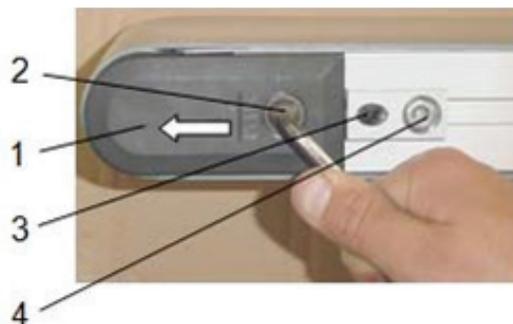


Belt Tracking

Caution!

Tracking (or realignment) of the belt must only be done while the belt is moving (pinch points).

To track the belt, loosen screw (2). Turn the fine adjustment set screw (3) at the tail, until the belt has centered itself on the tail drum. Finally, retighten screw (2) and move alignment block back into ready position.

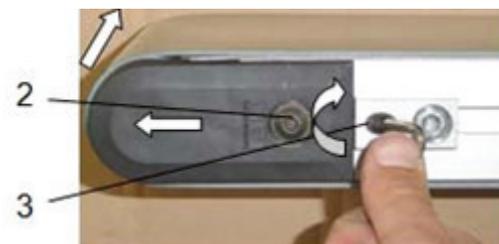

Technical Documentation

KFG-P 2000

8 CONVEYOR MAINTENANCE - BELT REPLACEMENT



All work to be performed by qualified personnel only.
Conveyor power must be disconnected before replacing belt.

8.1 Idler/Tail 01

23

General Remarks:

- Prior to replacing the belt, the tail assembly must be completely loosened and retracted - instructions for this are below.
- Any interfering parts must also be removed.
- When using an endless belt replacement belt, at least one side of the conveyor must be free and clear of stands, rails, and other accessories. This should be on the side opposite to the motor mount.
- Reassemble in reverse order.
- Replacement belts must be tracked and tensioned prior to use (see Section 7).

8 CONVEYOR MAINTENANCE - BELT REPLACEMENT


(CONT.)

8.1 Idler/Tail 01




All work to be performed by qualified personnel only.
 Conveyor power must be disconnected before replacing belt.

Loosen screws (2) and (3) and push the entire tail assembly (1) and alignment blocks inward (arrow direction) to loosen belt. Retighten screws (2) and (3). The belt may now be replaced, by sliding the old belt off and the new belt on. See previous section for tensioning and tracking. All new belts must be tensioned and tracked.

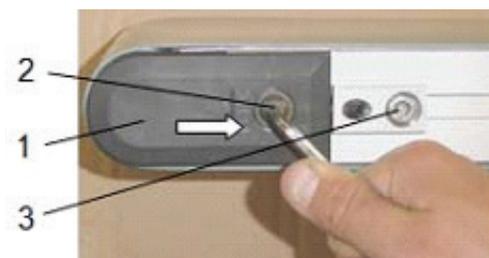

At the bend:

Remove screws in order to remove any protective guards (not shown).

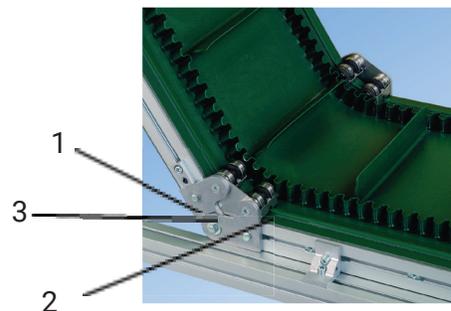

The belt can now be removed. Replace the belt and reassemble in reverse order. Track and tension the belt as show in Section 7 prior to use. Do not operate conveyor without all guards in place.

Technical Documentation

KFG-P 2000

9 CONVEYOR MAINTENANCE - TENSIONING & GREASING OF DRIVE CHAIN



All work to be performed by qualified personnel only.
Conveyor power must be disconnected before replacing belt.



THIS SECTION DOES NOT APPLY TO THE DRIVE VERSION AF.

Do NOT lubricate timing belt and pulley drive trains.

9.1	KFG-P 2000 AC	25
9.2	KFG-P 2000 AS	26
9.3	KFG-P 2000 AU	27

9 CONVEYOR MAINTENANCE - TENSIONING & GREASING OF DRIVE CHAIN (CONT.)

9.1 Tensioning & Greasing of the Drive Chain - KFG-P 2000 AC
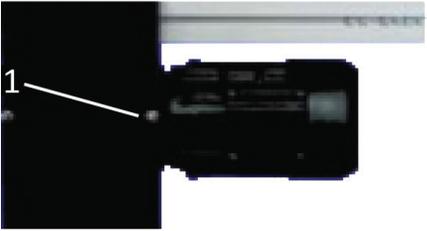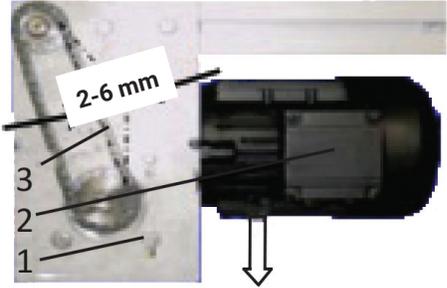
<p>Remove cap nuts (1) and remove the chain guard.</p>	
<p>Loosen the mounting screws (1) of the motor (2). Lower the motor, thereby adding tension to the drive chain (3).</p> <p>Do not over-tension the drive chain. Proper tension should allow 2-6 mm of chain movement on one side.</p>	
<p><u>Greasing the Drive Train</u></p> <p>The drive chain (1) must be lubricated with grease in accordance with the maintenance instructions (see Section 6). Apply the lubricant with a brush to the chain edges, in order for the lubricant to penetrate the links completely.</p>	


*Reassemble in reverse order; ensuring all screws are tight and all guards are in place before operating.

Technical Documentation

KFG-P 2000



9 CONVEYOR MAINTENANCE - TENSIONING & GREASING OF DRIVE CHAIN (CONT.)

9.2 Tensioning & Greasing of the Drive Chain - KFG-P 2000 AS
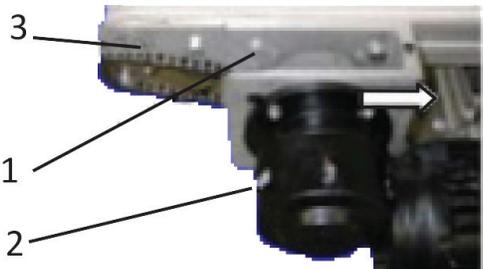
<p>Loosen bolt (1) at the upper and lower surface and remove the protective cover.</p>	 <p>A close-up photograph showing a hand using a tool to loosen a bolt labeled '1' on the upper surface of a drive chain assembly. The bolt is part of a protective cover mechanism.</p>
<p>Loosen fastening screws (1) of the gearmotor (2). Tighten the drive chain (3) by pushing the gearmotor downwards. In this procedure, be careful not to tighten the drive chain too much. The chain tension should be set between 2 and 6 mm.</p>	 <p>A photograph showing a gearmotor labeled '2' being pushed downwards to tighten the drive chain labeled '3'. Fastening screws labeled '1' are also visible. A white arrow points to the right, indicating the direction of movement for the gearmotor.</p>
<p><u>Greasing the Drive Train</u></p> <p>The drive chain (1) must be lubricated with grease in accordance with the maintenance instructions (see Section 6). During greasing, the grease must be applied to the edge of the chain, for example, with a brush in order to guarantee that it penetrates the rack joint.</p>	 <p>A photograph showing a drive chain labeled '1' being lubricated with grease. The grease is being applied to the edge of the chain, specifically to the rack joint.</p>

9 CONVEYOR MAINTENANCE - TENSIONING & GREASING OF DRIVE CHAIN (CONT.)

9.3 Tensioning & Greasing of the Drive Chain - KFG-P 2000 AU
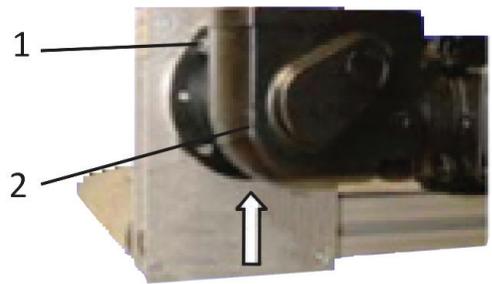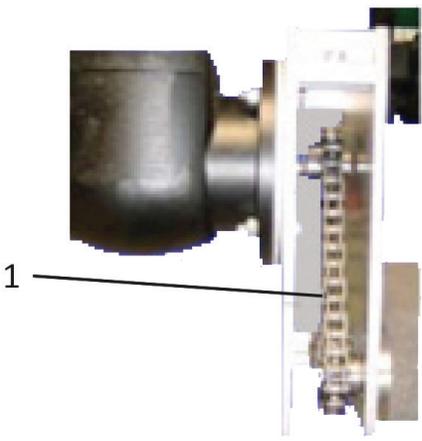
<p>Loosen bolt (1) at the upper and lower surface and remove protective cover.</p>	
<p>Loosen fastening screws (1) of the gearmotor (2). Tighten the drive chain by pushing the gearmotor downwards. In this procedure, be careful not to tighten the drive chain too much. The chain tension should be set between 2 and 6 mm.</p>	
<p><u>Greasing the Drive Chain</u></p> <p>The drive chain (1) must be lubricated with grease in accordance with the maintenance instructions (see Section 6). During greasing, the grease must be applied to the edge of the strap, for example, with a brush in order to guarantee that it penetrates the chain pin.</p>	

Technical Documentation KFG-P 2000

10 CONTACT INFORMATION



sales@mknorthamerica.com
spareparts@mknorthamerica.com
service@mknorthamerica.com



(860) 769-5500

Technical Documentation
KFG-P 2000
Incline Belt Conveyor

mk North America, Inc.
an mk Technology Group Company
105 Highland Park Drive
Bloomfield, CT 06002, USA
Phone: (860) 769-5500

www.mknorthamerica.com
sales@mknorthamerica.com

All rights reserved, information subject to change without notice. © 2024 mk North America, Inc.

REV. 2024.03.11